


# SMT-i5230 Quick Reference Guide


## Parts and Names

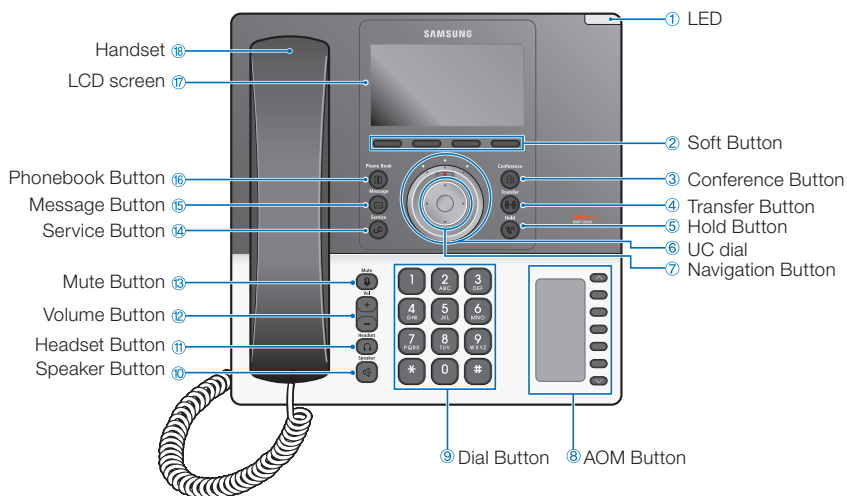





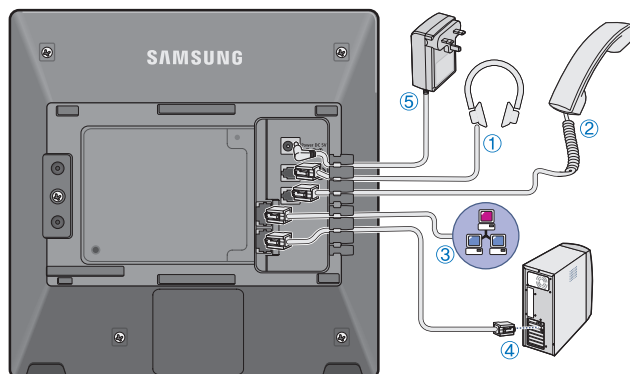


### UC Dial and Navigation Button

- Left: Unconditional call transfer
- Center: Standby status
- Right: 'Do Not Disturb' and buddy rejection status











## Phone Installation




# Making & Receiving a Call

Dialing	Station Line	 or press  button → Enter phone number → Select <b>[Call]</b> from the soft menu.
	Extension Line	 or press  button → Press the dial button  → Enter phone number → Select <b>[Call]</b> from the soft menu.
Receiving a call		 or press  button

# Basic Functions

Volume Control	 or press  button or  →  button
Call Hold	Busy state → Press  button →  (To cancel holding, press  button)
Call Transfer	Busy state → Press  button → Enter the phone No. (for an external call, press the dial button  , and enter the phone No.) → 

# Screen Structure

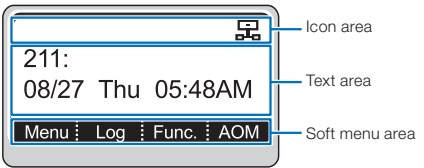

Area	Description
Icon area	Displays various icons.
Text area	Displays the information (e.g., message, phone number) entered by a user as well as the date, time, etc.
Soft menu area	Displays the functions allocated to the 4 soft buttons. Function menus are provided depending on the situation -busy or standby-as defined in the phone. A user can use the function menus by pressing the <b>[Func.]</b> soft button.



## **Correct Disposal of This Product** *(Waste Electrical & Electronic Equipment)*

*(Applicable in the European Union and other European countries with separate collection systems)*

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Information in this document is proprietary to SAMSUNG Electronics Co., Ltd.

No information contained here may be copied, translated, transcribed or duplicated by any form without the prior written consent of SAMSUNG.


Information in this document is subject to change without notice.





# SMT-i5230 Kurzanleitung


## Parts and Names

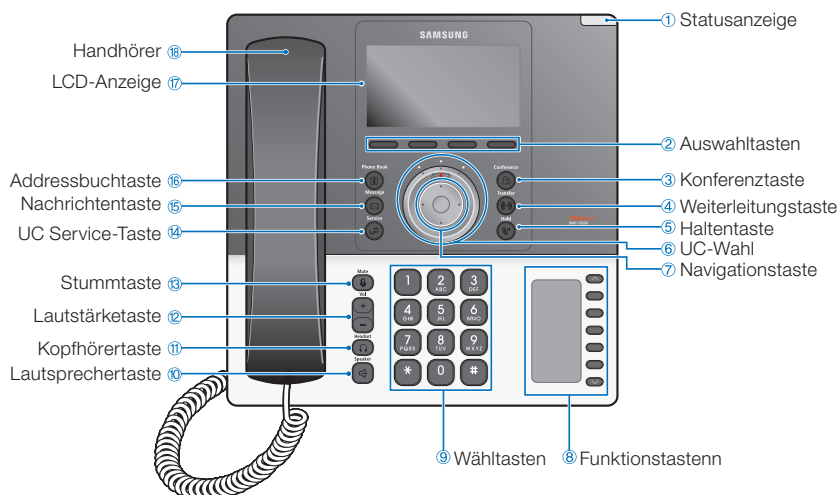





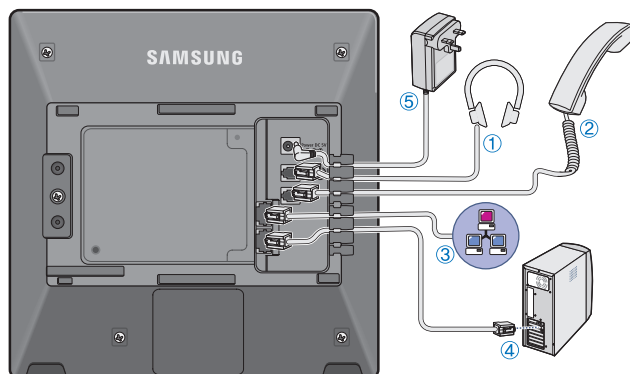


### UC-Wahl- und Navigationstasten

- Links: Anrufweiterleitung
- Mittlere: Im Büro erreichbar
- Rechts: Nicht Stören











## Phone Installation




# Anruf tätigen/Anruf annehmen

Anruf	Interner Ruf	<p>Heben Sie den Hörer ab  oder drücken Sie die Taste </p> <p>→ Wählen Sie die interne Rufnummer → Wählen Sie <b>[Send]</b> vom Soft-Menü.</p>
	Amtsrufruf	<p>Heben Sie den Hörer ab  oder drücken Sie die Taste </p> <p>→ Wählen Sie die Amtsholungskennziffer  → Externe Rufnummer eingeben → Wählen Sie <b>[Send]</b> vom Soft-Menü.</p>
Anrufannahme		<p>Heben Sie den Hörer ab  oder drücken Sie die Taste </p>


## Basisfunktionen

Lautstärke- einstellung	<p>Heben Sie den Hörer ab  oder drücken Sie die Taste </p> <p>bzw.  → nun mit der Taste  die gewünschte Lautstärke einstellen</p>
Halten	<p>Im Gesprächszustand → drücken Sie die Taste </p> <p>→  (um Halten aufzuheben , noch einmal die Taste  drücken)</p>
Weiterleiten eines Anrufs	<p>Im Gesprächszustand → drücken Sie die Taste </p> <p>→ wählen Sie die interne Rufnummer (für externe Gespräche, wählen Sie die Amtskennziffer , und geben Sie die externe Rufnummer ein) → </p>

# Screen Structure

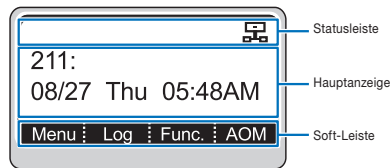

Area	Description
Statusleiste	Symbole zur Anzeige der aktivierten Telefonfunktionen.
Hauptanzeige	Menüs, Anrufmanagement und diverse Nachrichtenstatistiken werden angezeigt.
Soft-Leiste	Menüs, die der Anwender entsprechend dem aktuellen Status auswählen kann.

 

## Korrekte Entsorgung von Altgeräten (Elektroschrott)

*(In den Ländern der Europäischen Union und anderen europäischen Ländern mit einem separaten Sammelsystem)*

Die Kennzeichnung auf dem Produkt, Zubehörteilen bzw. auf der dazugehörigen Dokumentation gibt an, dass das Produkt und Zubehörteile (z. B. Ladegerät, Kopfhörer, USB-Kabel) nach ihrer Lebensdauer nicht zusammen mit dem normalen Haushaltsmüll entsorgt werden dürfen. Entsorgen Sie dieses Gerät und Zubehörteile bitte getrennt von anderen Abfällen, um der Umwelt bzw. der menschlichen Gesundheit nicht durch unkontrollierte Müllbeseitigung zu schaden. Helfen Sie mit, das Altgerät und Zubehörteile fachgerecht zu entsorgen, um die nachhaltige Wiederverwertung von stofflichen Ressourcen zu fördern.

Private Nutzer wenden sich an den Händler, bei dem das Produkt gekauft wurde, oder kontaktieren die zuständigen Behörden, um in Erfahrung zu bringen, wo Sie das Altgerät bzw. Zubehörteile für eine umweltfreundliche Entsorgung abgeben können.

Gewerbliche Nutzer wenden sich an ihren Lieferanten und gehen nach den Bedingungen des Verkaufsvertrags vor. Dieses Produkt und elektronische Zubehörteile dürfen nicht zusammen mit anderem Gewerbemüll entsorgt werden.

